


PRELIMINARY

With the memory button hand control, your PERFECT POSITION is always at your fingertips!

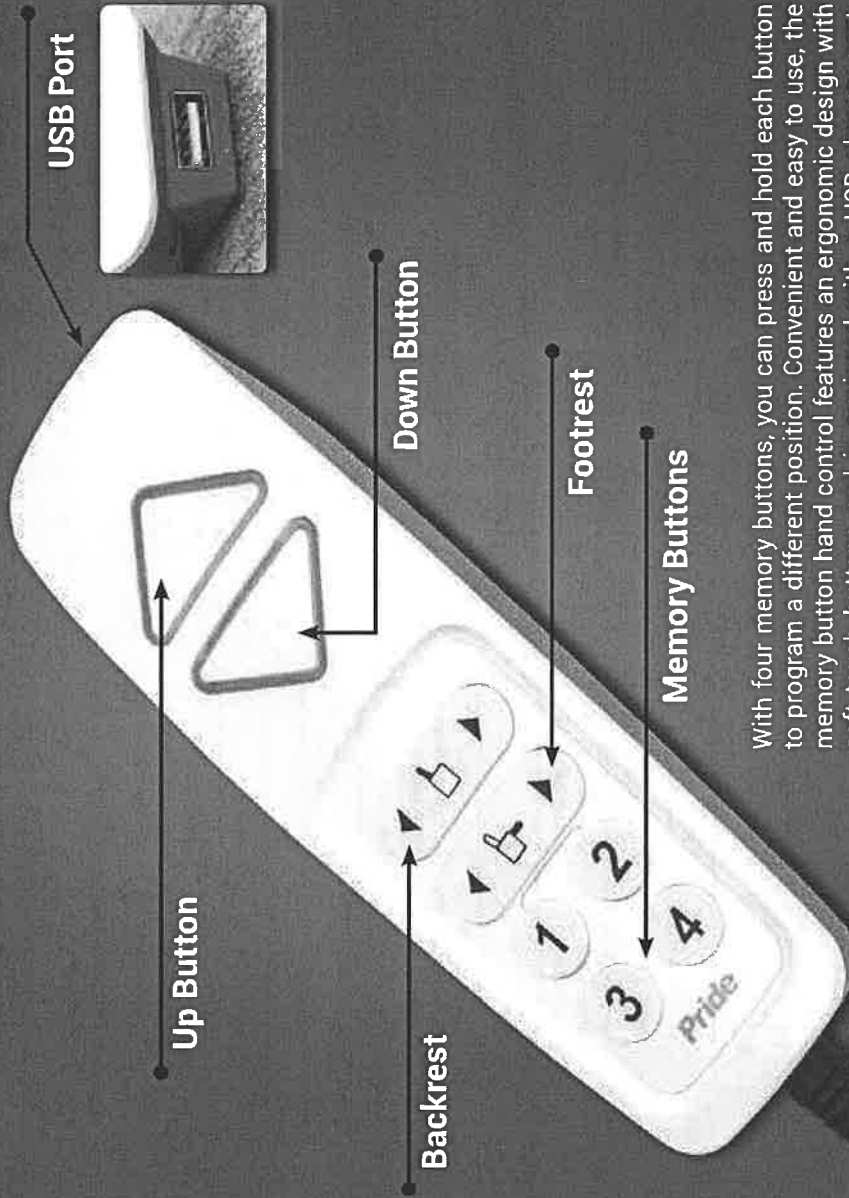

With four memory buttons, you can press and hold each button to program a different position. Convenient and easy to use, the memory button hand control features an ergonomic design with soft-touch buttons and is equipped with a USB charger port. Standard on the Oasis LC-580IM and LC-580IL.

How to Set Your Memory Buttons

Find your desired position

Press and hold memory button 1 and memory button 2 for three seconds. The LED lights on the memory buttons will flash to indicate that the hand control is in "set" mode.

Press and hold the desired memory button for three seconds to set the memory position. The LED lights will stop flashing.

Repeat steps to program memory buttons 2-4.

The Oasis brings a new level of comfort to Pride® Power Lift Recliners. Overstuffed padding provides elegant comfort and design, while contoured memory foam seating and pocketed coils deliver individualized support and relaxation. The Oasis provides true-infinite positioning and a standard memory button hand control.

- Premium furniture grade laminate/hardwood frames for added strength and durability
- Sinuous no-sag back springs combine durability with just the right amount of flexibility for personalized comfort
- Specially designed arms afford a luxurious feel and firm support
- Industry-exclusive quad pocket design offers extra storage – easy access top pockets provide convenient storage for your hand control and other devices
- Removable filling allows for custom lumbar support
- Standard lumbar pillow for additional support while relaxing

Options

- Deluxe heat and massage
- Residential cleaning kit
- Head pillow



Shown in Cashmere

Oasis
COLLECTION